



# INSTRUCTION FOR **READ-EZE II** **LKM1003RE**

## DIAL RING INDICATOR

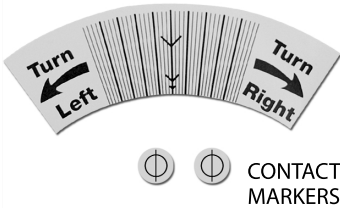


- 1 Center Dial Ring Indicator on Crow's Foot mark and apply as shown.

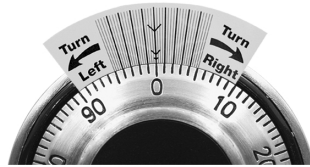

- 2 Locate Right contact and align Contact Marker with Dial Ring Indicator as shown and apply.



- 3 Locate Left contact and align Contact Marker with Dial Ring Indicator as shown and apply.

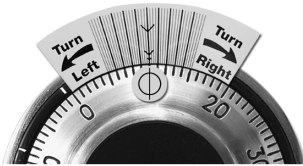

- 4 Position Magnifier for optimum viewing and continue normal manipulation procedures

copyright © 2012 Lockmasters Inc.

LKM1003REINST

**FAX 859.885.1731**  
**800.654.0637**

**LOCKMASTERS®**  
INCORPORATED

2101 John C. Watts Drive, Nicholasville KY 40356

[salesinfo@lockmasters.com](mailto:salesinfo@lockmasters.com)  
[www.lockmasters.com](http://www.lockmasters.com)

Battery housing on the LKM1003RE  
Read EZE II tool operates on  
Three 386(SG-12) button cell batteries.



### Battery Housing



Remove cover on the back of battery housing to expose battery cover.



Remove battery cover to access the 3 batteries.

Phillips head screw  
used to tighten or  
loosen the tension  
on the arm.



copyright © 2012 Lockmasters Inc.

LKM1003REINST

**FAX 859.885.1731**  
**800.654.0637**

**LOCKMASTERS®**  
INCORPORATED

2101 John C. Watts Drive, Nicholasville KY 40356

salesinfo@lockmasters.com  
www.lockmasters.com